



I.L. MOTORSPORT

Installation Instruction

Foot Pedal Set NC


NC0-0145

Remove the original rubber from the brake / clutch pedal.


Now you can start installing the I.L. Pedal Set.

Hold the foot rest plate to the original footrest and mark the mounting holes.

With a 3mm drill bit, drill a hole on the marked positions. Fixate the foot plate on the original footrest with the supplied fittings.

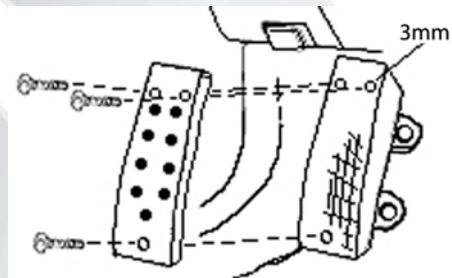



Hold the pedal plate to the accelerator pedal and mark the mounting holes. With a 4 - 4,5 mm drill bit, drill holes on the marked positions. Install the plate with the supplied fittings.

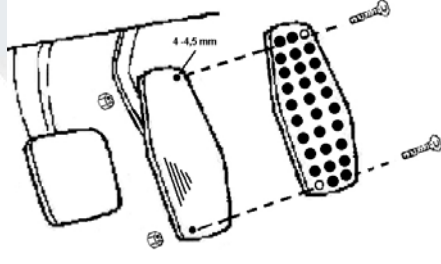

The clutch and brake pedal cover are installed as follows.

Slide the cover on to the bottom part of the pedal plate.

Now use a small screwdriver to pry the rubber on to the top part of pedal plate

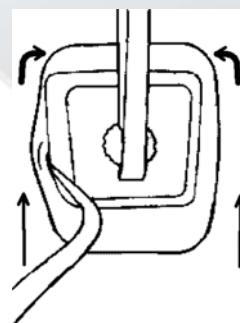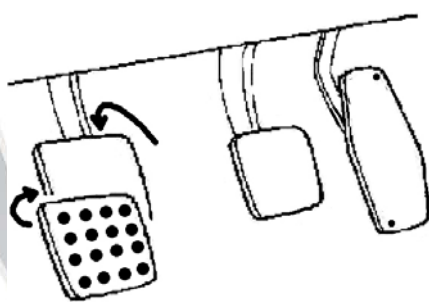

NC-Pedalset

