



I.L. MOTORSPORT


Einbauanleitung

rear upper Brace bar for MK3


NC0-0966

In order to fit this brace bar, the interior trunk trims must be removed and altered as follows.


Remove the fasteners as shown below then disconnect the compartment light connector and then the trunk lid cancel switch connector. You will then be able to remove the trim.

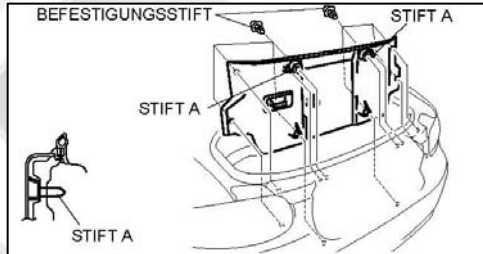



Remove the fasteners in the partition board, and then remove the trim.

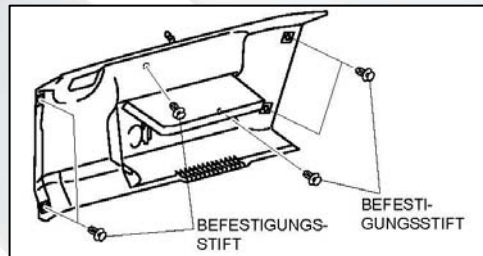

For the side trims. Remove all the fasteners as show below, and remove the two trims.
For the metal trim remove all screws.

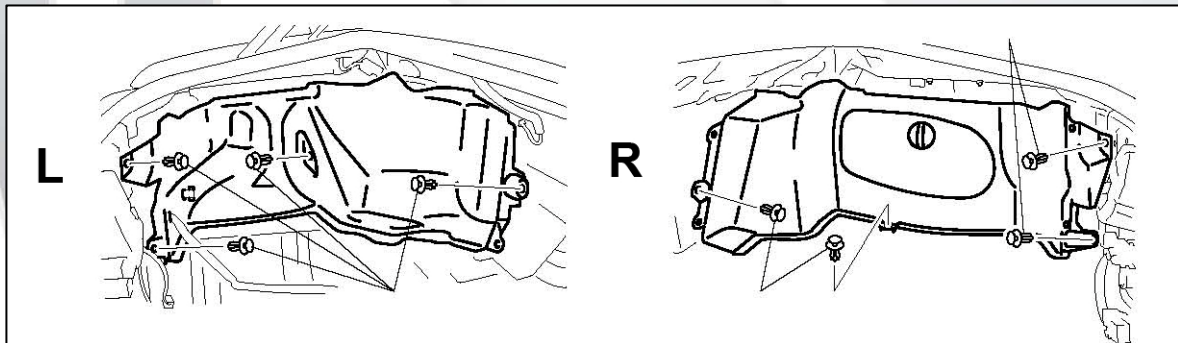

Undo the top mount retaining nuts as show below, and also the cable retainer nut.

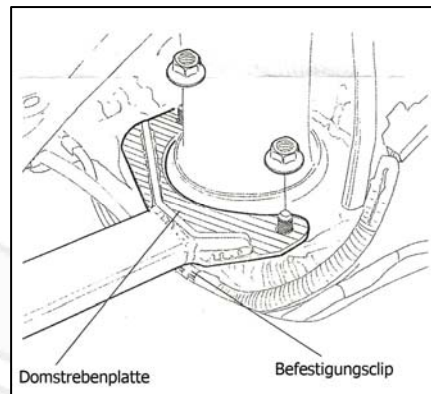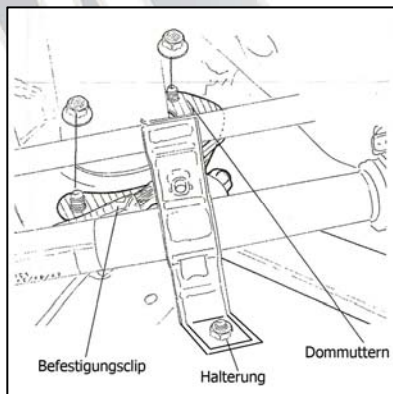

Place the brace bar loosley on to the top mount studs ans ensure it is all sitting level. Then refit the nuts and tighten down the bar.



I.L. MOTORSPORT


Einbauanleitung

rear upper Brace bar for MK3


NC0-0966

When refitting the trims, they will need to be altered as follows. In the following sequence, trim the panels as shown below.


Right hand side cut out as shown.

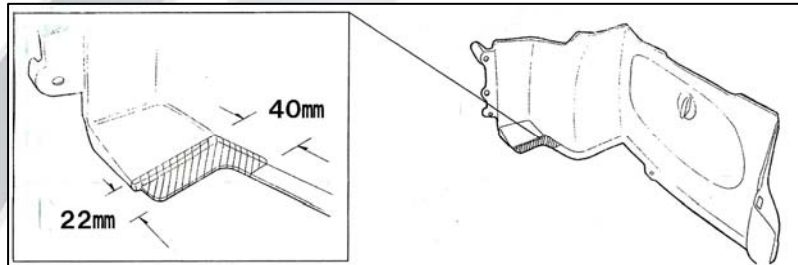


Left hand side cut out as shown, including the metal part.

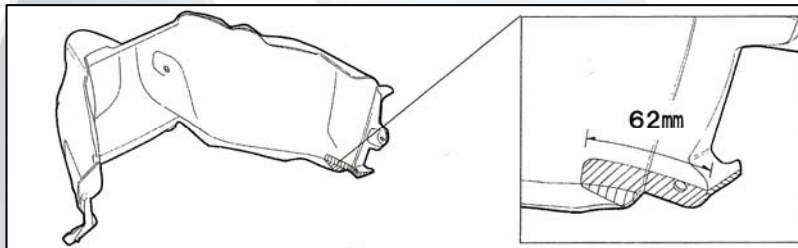

Metal

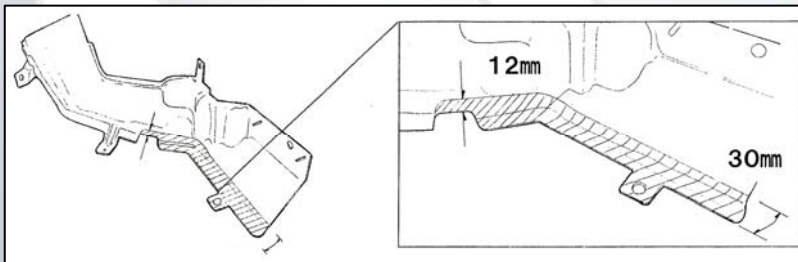

Rear panel cover cut out as show.

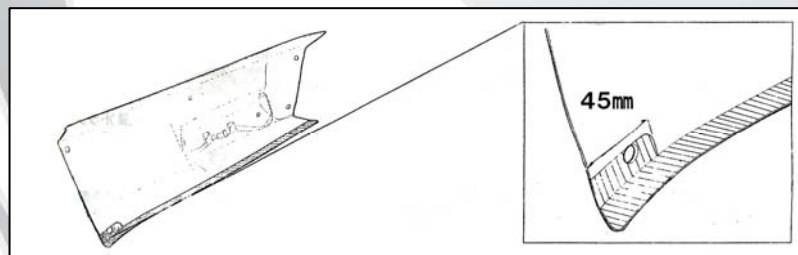

Once all the trims have been altered, refitting them ist he exact reverse of removal.

